

## Software Update Instructions for H16-AIP

1. Remove the 8 screws (4 on each side) in the yellow-marked area, then you can take off the top cover of the H16-AIP.



01


[www.nuprime-x.com](http://www.nuprime-x.com)

beyond  
ordinary


2. Copy the software update file to a USB flash drive. Make sure the file is placed in the root directory (top level) of the USB drive.  
Note: The USB flash drive must not exceed 32GB.
3. Power on the H16-AIP. When the startup screen appears, press the MENU button on the remote control.





4. Insert the USB flash drive into the USB A port of the H16-AIP.

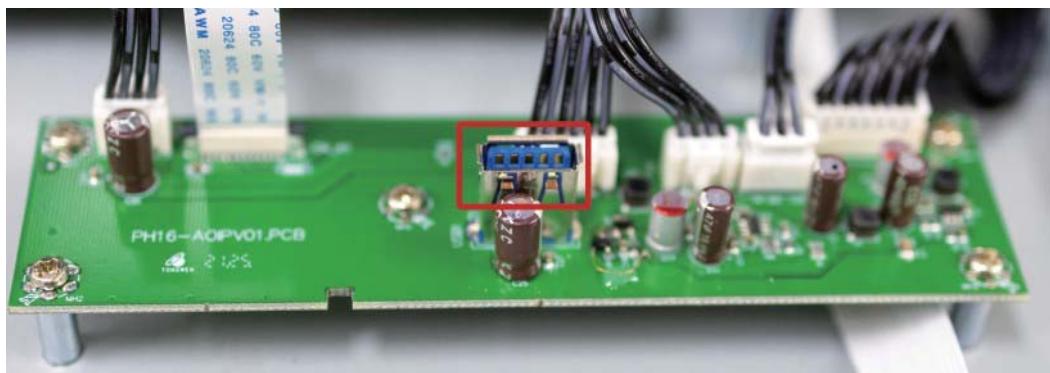

5. In the MENU, go to SET UP → About.

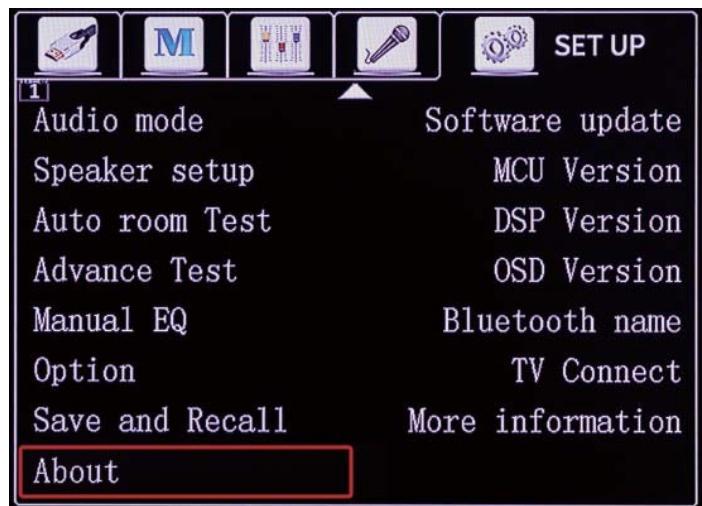

6. In the About menu, select Software Update, press OK on the remote control, and then choose YES to confirm.

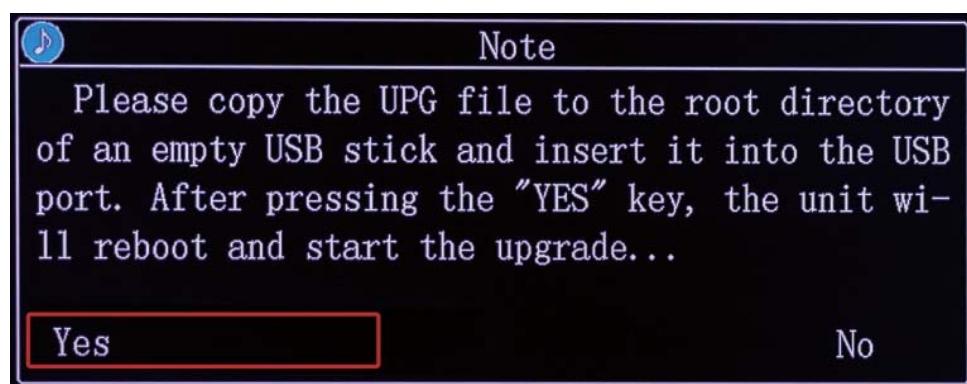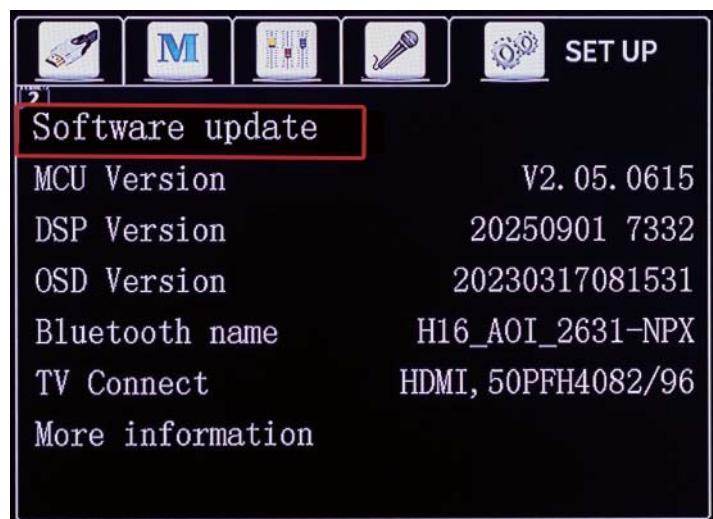

7. Wait for the update process to complete. This will take approximately 3–5 minutes, after which the unit will return to the startup screen.
8. Re-enter the About → Software Update menu to confirm that the version number has been updated.

